


# FS1-USB Sensor to PC

No external power supply is required.  
Outputs: USB

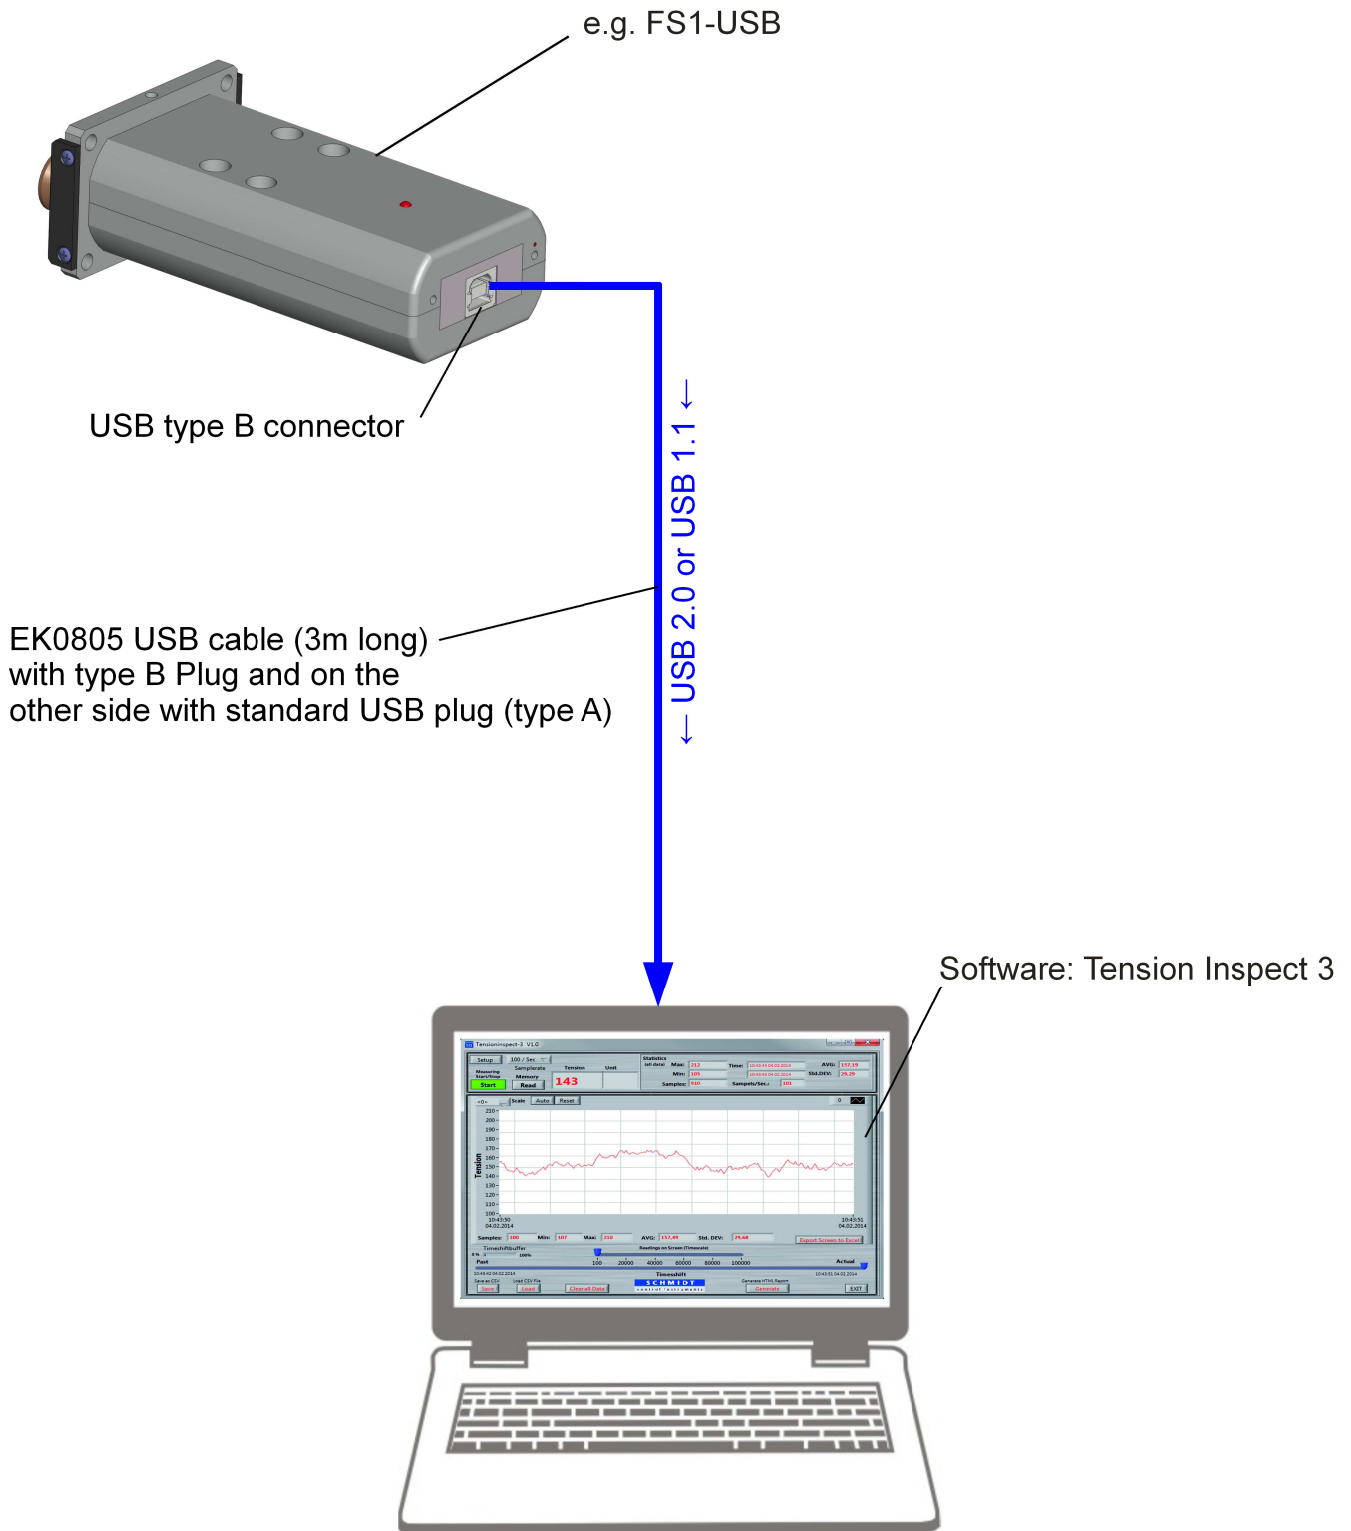

# 4xFS1-USB Sensor to PC

(up to max. 8 sensors)  
Outputs: USB

