



# FS1 - Sensor with Display SC-PM

outputs: USB, RS 422, analog and alarm

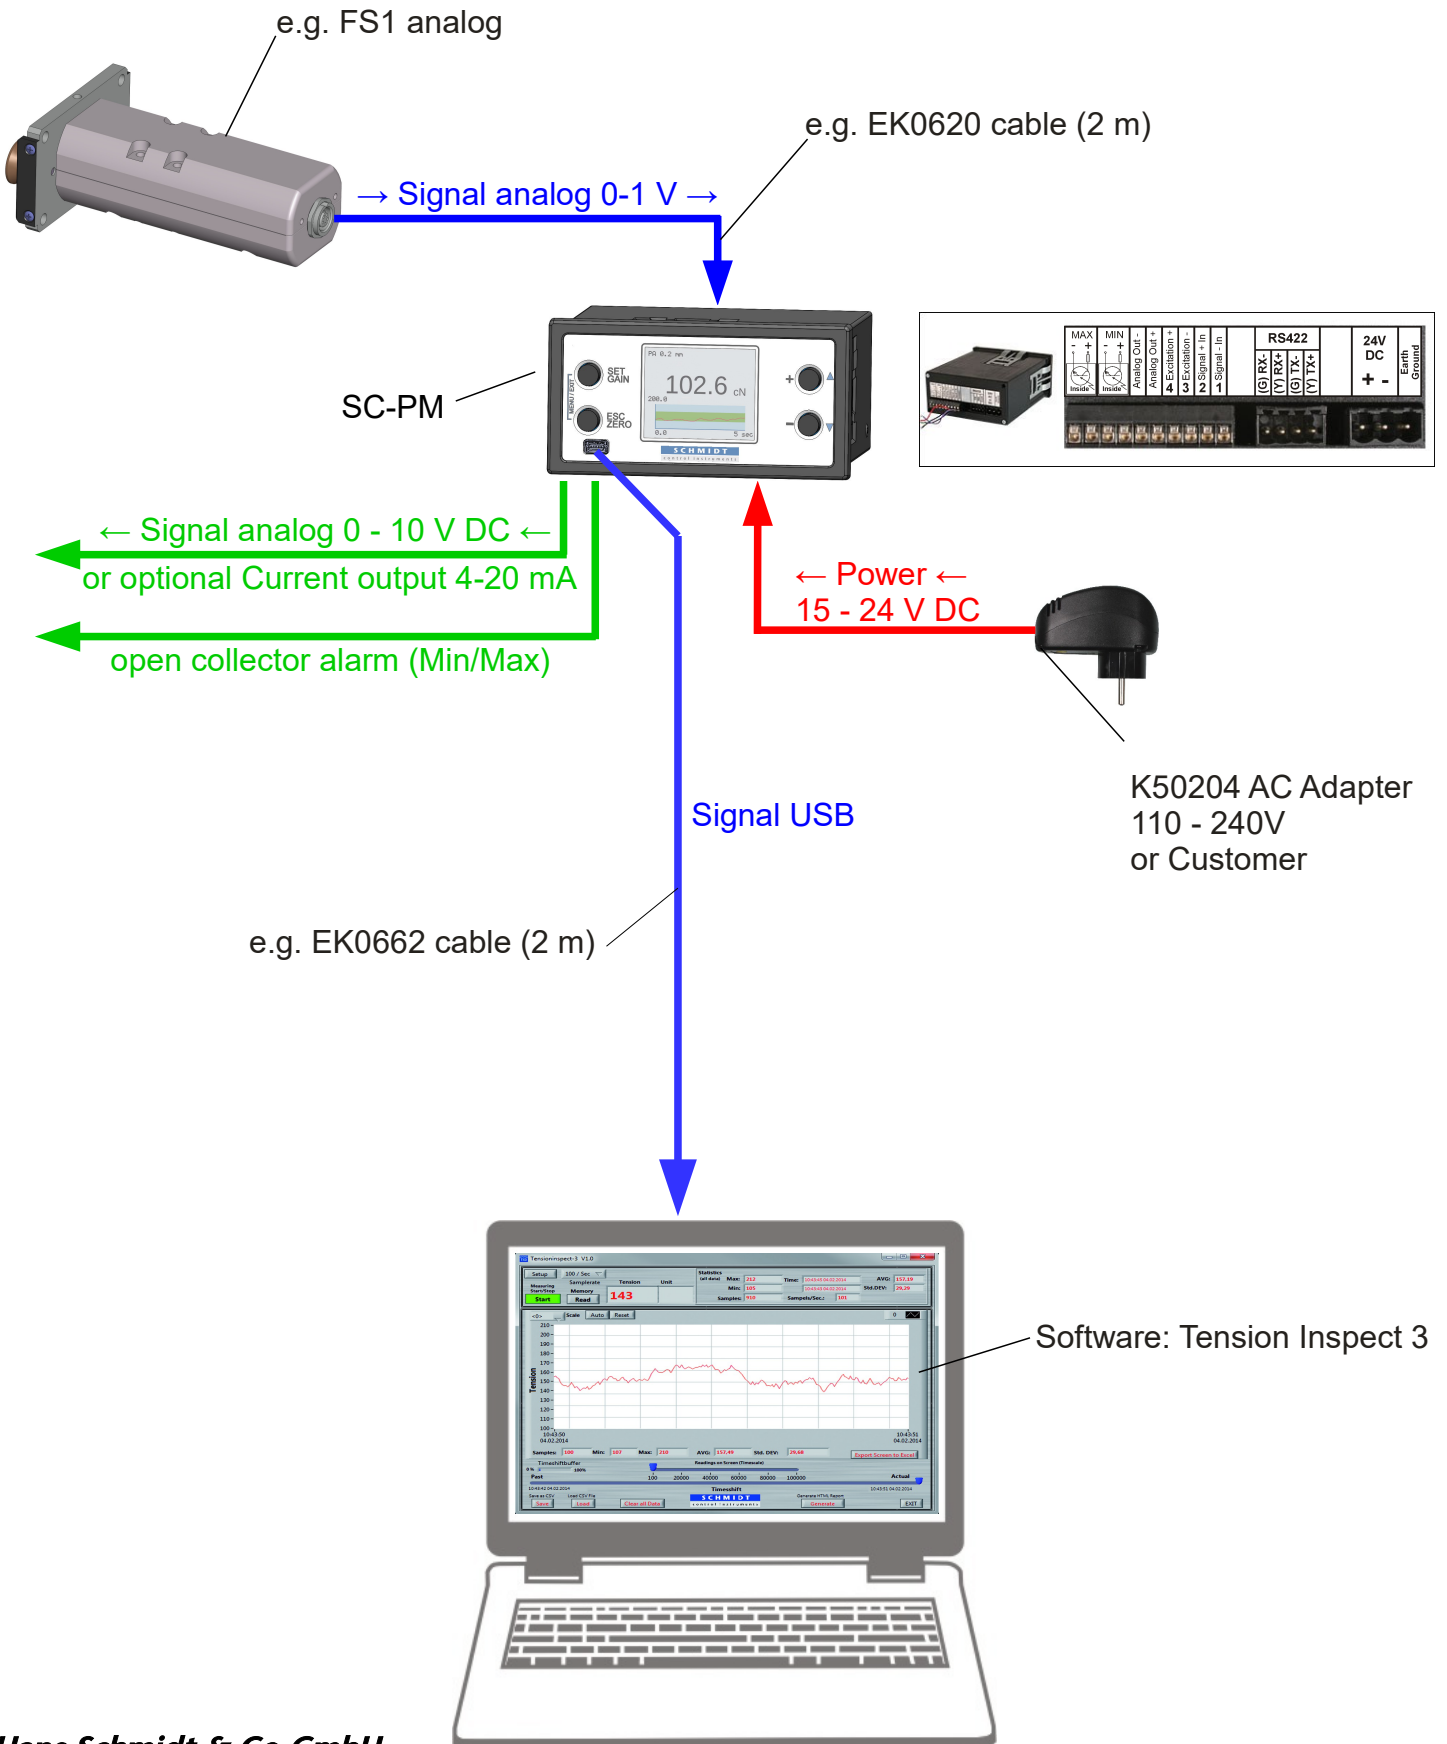


# MZ-Sensor with Display SC-PM

outputs: USB, RS 422, analog and alarm

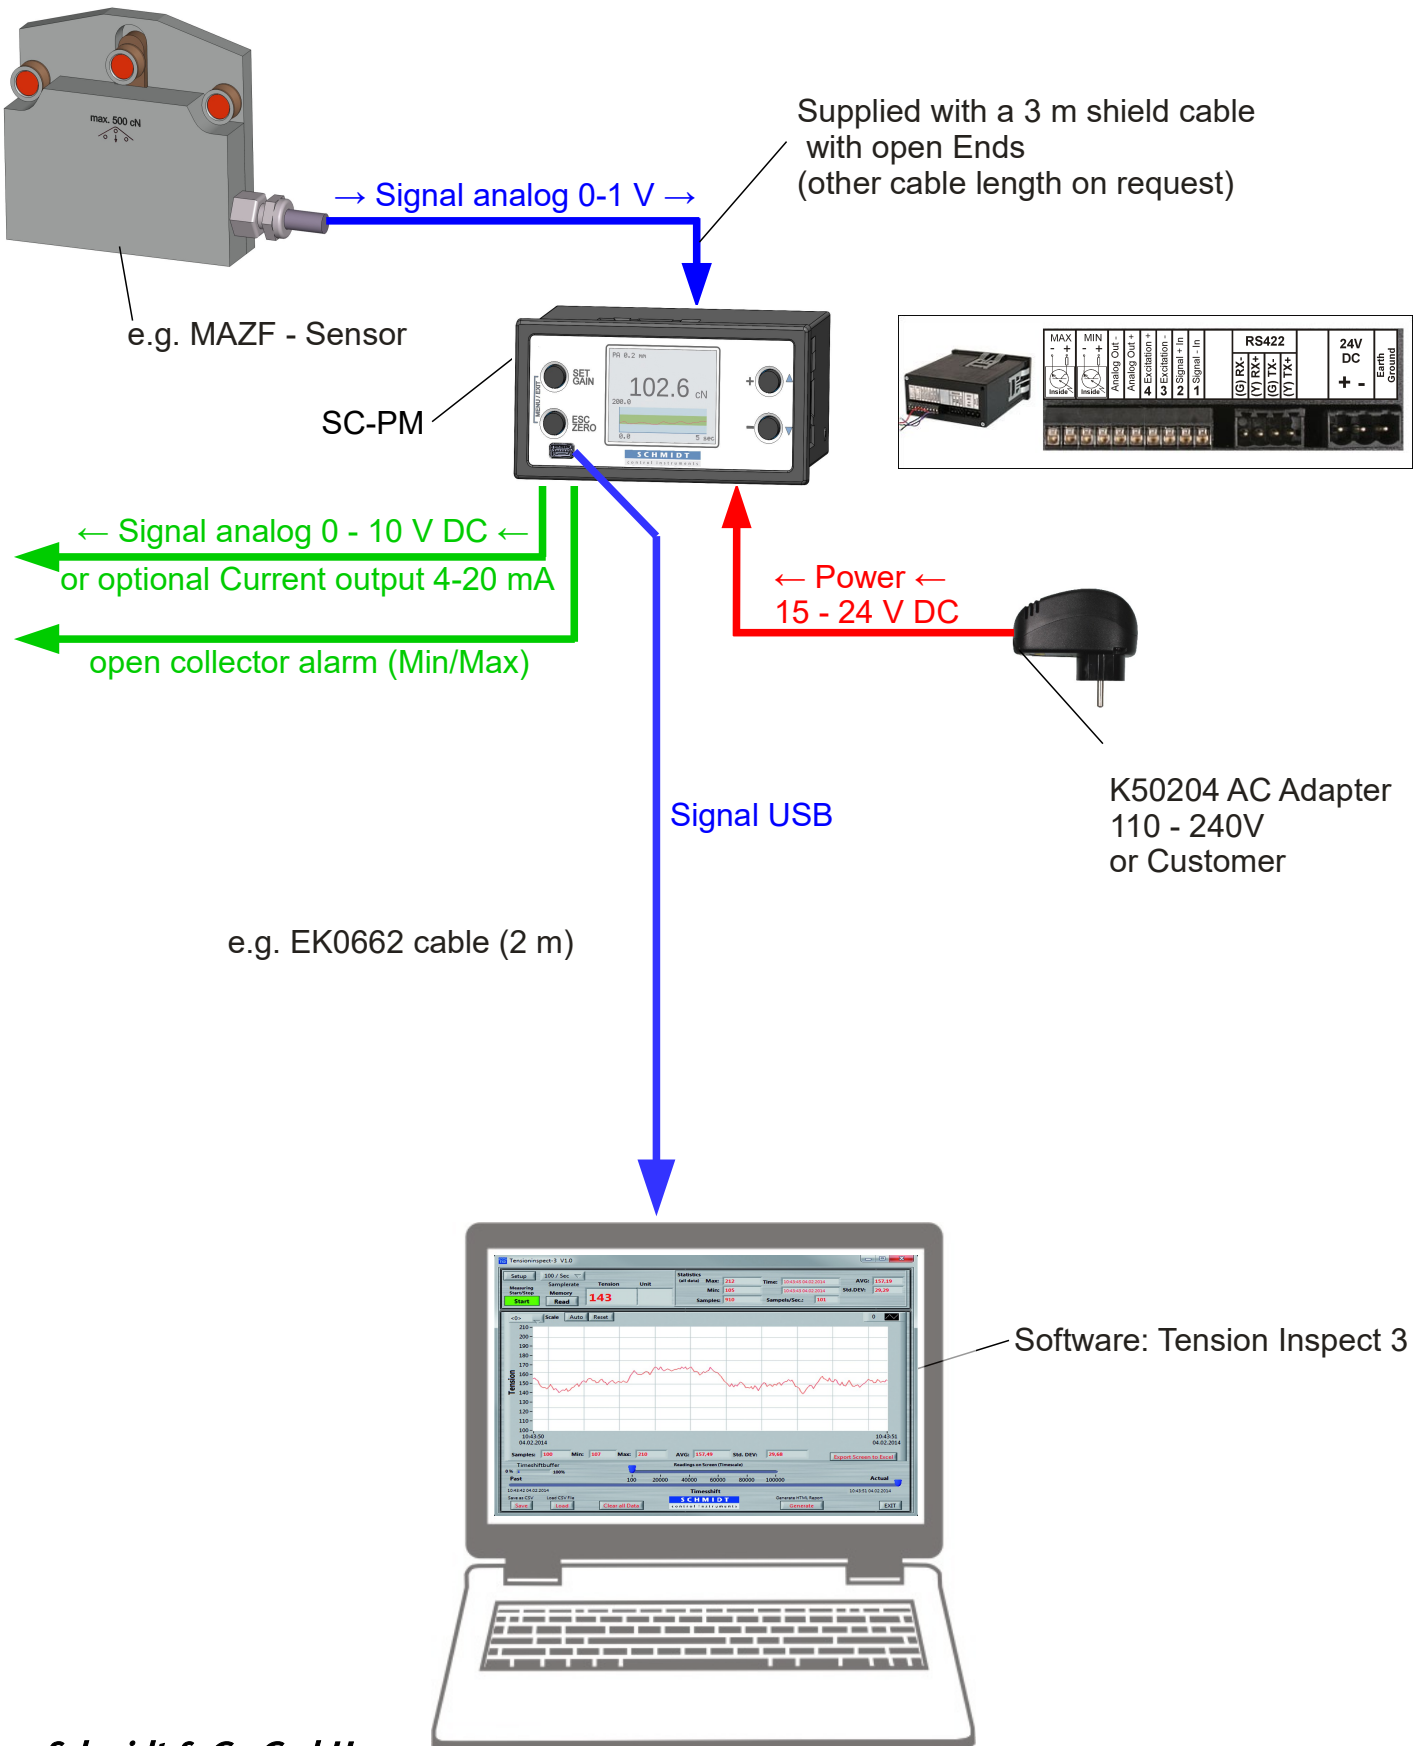

# MZ1 / MZH / MZB1 - Sensor with Display SC-PM

outputs: USB, RS 422, analog and alarm

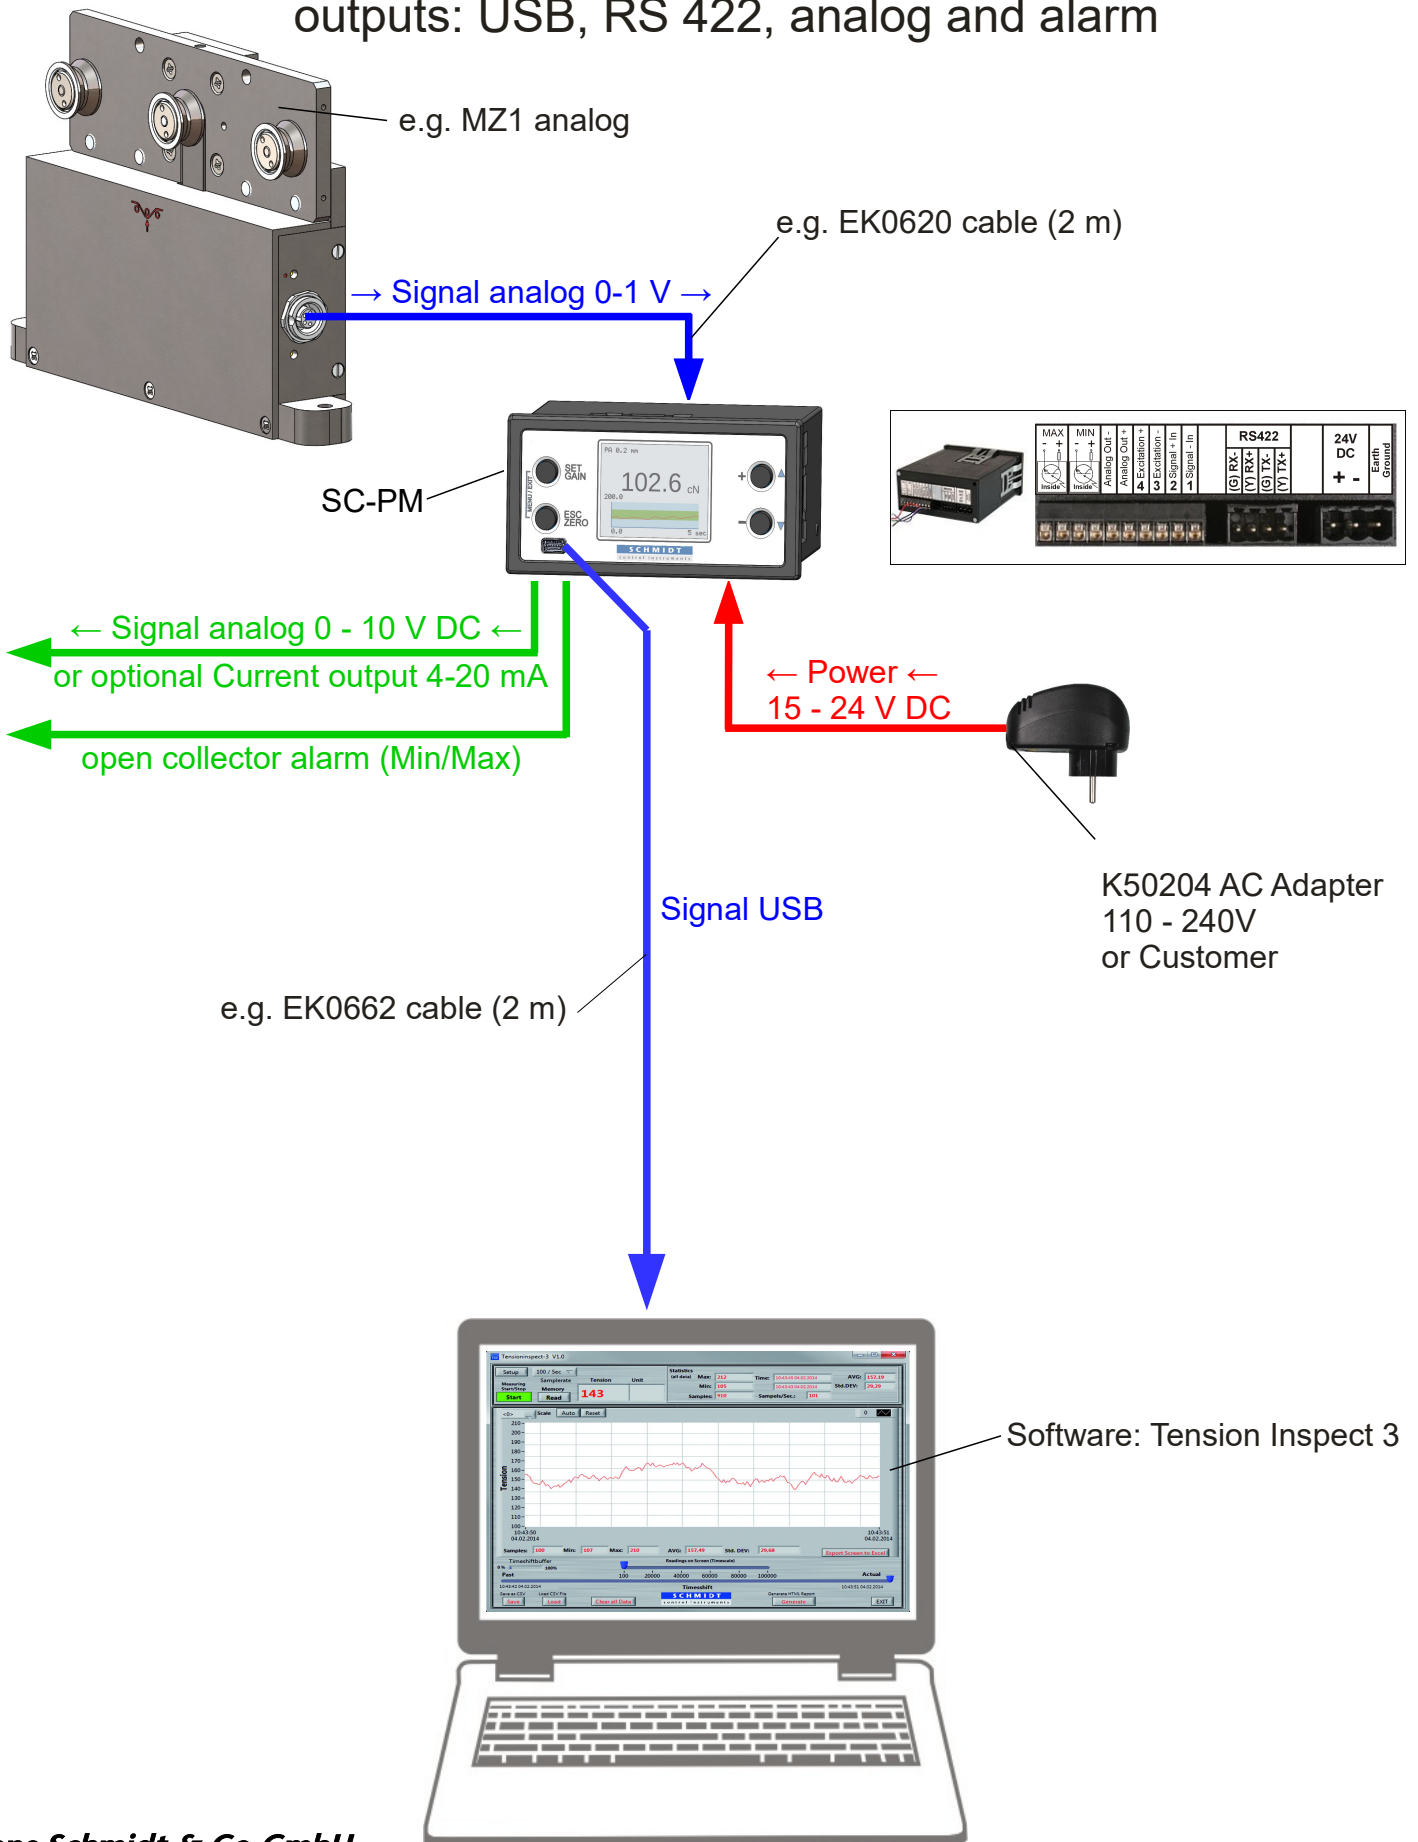

# TS-Sensor with Display SC-PM

outputs: USB, RS 422, analog and alarm

